




CORNELL

Emergency Response Systems

A-1700 Remote Monitor

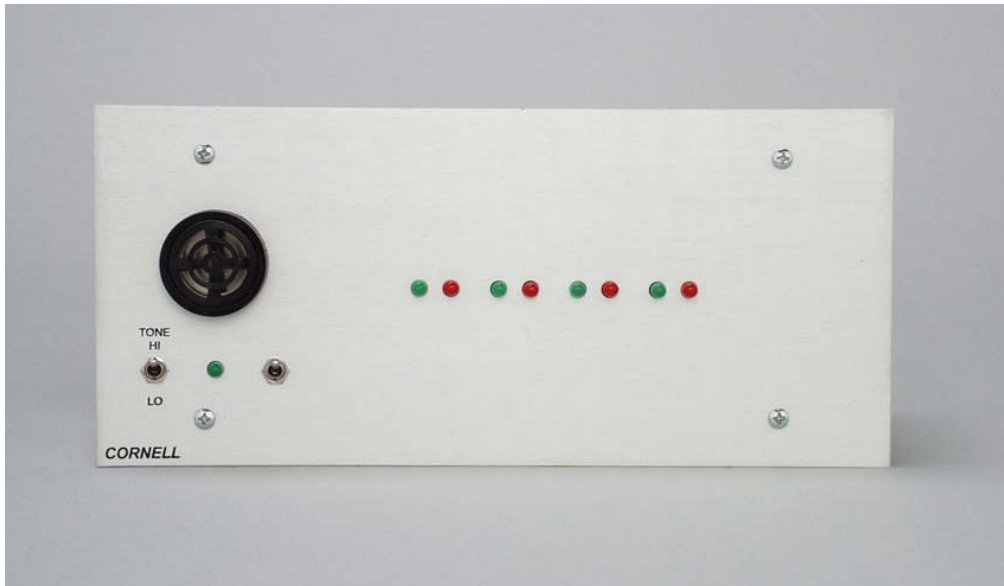

A-1700

CORNELL A-1700 Remote Monitors provide at-a-glance indications of door status.

1-800-558-8957

Operation: Used with the CORNELL Series A-1000 Door Monitor Systems, A-1700 panels with integral LEDs permit remote monitoring of individual zones within the system.

Indications: Steady green LEDs indicate unarmed status; steady red, armed status; flashing red with intermittent tone, an alarm condition. Zones are designated via plastic-covered designation strips.

Controls: Tone volume is adjustable via high-low switch.

Details: Anodized aluminum faceplate, flush-, surface- or desktop-mountable.

Engineering Specifications:

The contractor shall furnish and install CORNELL A-1700 Remote Monitor Panels as shown on the plans for use with series A-1000 Door Monitor System. Each (flush-) (surface-) (desktop-) mountable panel shall accommodate ____ zone circuits. Indicators shall be LEDs; incandescent lamps are not acceptable. Steady green LED shall indicate unarmed status; steady red, armed status; flashing red with intermittent tone, and alarm condition. Zones shall be designated with plastic-covered designation strips. Power shall be derived from the A-1000 master panel at 12 volts DC, regulated. Each remote zone indication requires 17MA.

CORNELL COMMUNICATIONS, INC.

Milwaukee, Wisconsin USA - 800-558-8957 - 414-351-4660 - Fax 414-351-4657
www.cornell.com - sales@cornell.com

