




Visual Nurse Call 4000 Dual/Single Status  
Light Status 2000 Series  
Rescue Assistance 4200 Series – Remote Panel



## Annunciator Panel Easy Label A-4400 Series

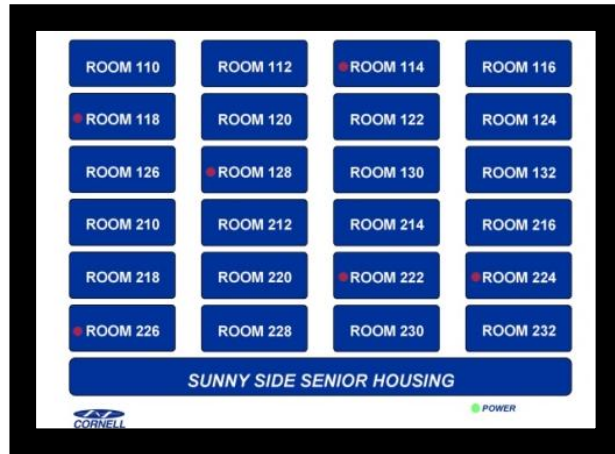

**Description:** Cornell's A-4400 Series Annunciator panels allow at a glance indication of patient/room/station status.

**Options:** Cornell's A-4400 Series Annunciator panels are very customizable:

- Ability to display 1- 48 rooms/zones with LEDs as needed
- Choice of red, amber, green, or blue LEDs
- Room labels are customizable with included NEW 4400 Easy Label Template Editor Program

- Adjustable Tone Volume on the back of the panel (Separate Tone Card Required)

**Operation:** When used with a Cornell system, panel permits monitoring of individual zones.

**Mounting:** Panel mounted on narrow depth surface mountable frame. Mounting kit included.

**Engineering Specifications:** The contractor shall furnish and install the Cornell A-4400 Series Annunciator Panels as shown on the plans. Each narrow depth surface mountable panel shall accommodate from 8 to 48 zones per panel. Multiple panels may be used for larger facilities. Indicators shall be the specified colored LEDs. Separate green LED light shall indicate power. Power shall be 24 Volts VDC, regulated.

### Technical Information:

- Power Requirements: 24VDC
- Operating Environment: 50-120°F Indoor Non-condensing
- Physical Dimensions: 8.75"H x 12.25"W x 1.5"D
- Mounting: Narrow depth surface mountable frame
- Wiring: Minimum 22 AWG  
To Power: Minimum 18 AWG

**CORNELL COMMUNICATIONS, INC.**

Milwaukee, Wisconsin USA • 800-558-8957 • 414-351-4660 • Fax 414-351-4657  
www.cornell.com • sales@cornell.com



DA4400CM  
Rev 160626